

ENG / UA



Trimmer 8.0



medica+
JAPAN TECHNOLOGY



medica+

JAPAN TECHNOLOGY

ENG



medicat+
JAPAN TECHNOLOGY


Instruction

Trimmer 8.0

Content

| | |
|-------------------------------------|-------|
| General descriptions | 01-02 |
| Instruction manual..... | 02 |
| Instruction for head replacements.. | 03 |
| Using the trimmer | 04 |
| Body Shaver/Nose/Ear trimmer..... | 05 |
| Eyebrow/ Beard trimmer..... | 06 |
| Cleaning & Maintenance..... | 06 |
| Cleaning with brush/with water..... | 07 |
| Charging | 08 |
| Basic parameters | 09 |
| Warning/Environment..... | 10 |

General descriptions

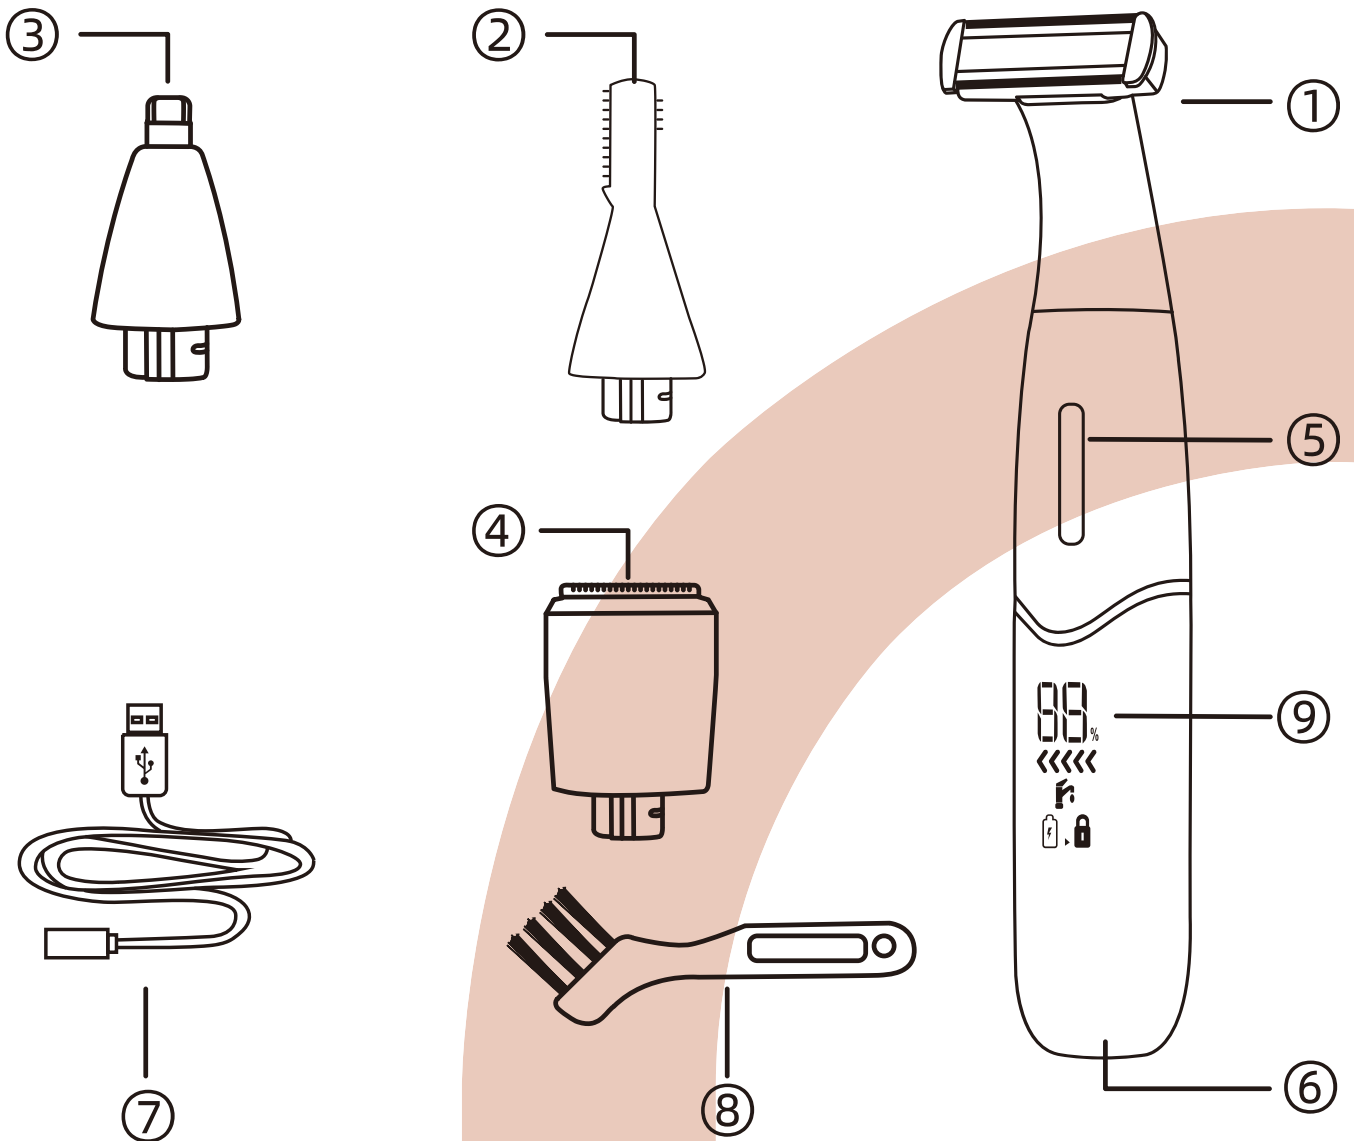

1. Body shaver
2. Eyebrow trimmer
3. Nose hair trimmer
4. Beard trimmer & body shaver
5. Switch

6. Usb charging port
7. Usb charging cable
8. Cleaning brush
9. Digital display

Instruction manual for trimmer set

Read through this entire instruction manual before using the 4-in-1 Trimmer Set. We're dedicated to bringing you well-designed products that make living fun and easy.

Instruction for head replacements

To change attachments, hold the trimmer body with the switch side facing towards you.

Remove: turn it antidockwise, you will hear a "click" then you can separated it from the product.

Install: aim the utting head rotation axis, then turn it by clockwise rotation, tighten it

Using the trimmer

Press the bottom of the switch to turn on the machine.

Select the trimmer blade and place it carefully on the body where the hair needs to be trimmed. Press the top of the switch to turn off the power when stop trimming.

Always clean the trimmer after using this machine. Keep this machine and usb cord in a moisture-free circumstance.

Body Shaver

1. Move the razor head on the skin against the main direction of beard growth and make straight and circuitous movemen.
2. Achieve best shaving effect on dry clean face, therefore shave before orapeniod of time after getting washed.

Nose/Ear trimmer

1. The Nose Trimmer is designed to remove unwanted hair from the nose or ear areas.
2. Gently approach the area to be trimmed, Never force the Nose/ear Trimmer into nose or ear cavities as this can result in injury.
3. If you experience any pain or discomfort when using this product STOP using it immediately
4. Always clean the trimmer after use and keep this machine and usb cord in a moisture-free circum stance

Eyebrow trimmer

You can use this attachment for trimming, unwanted eyebrow hair, fine facial and ear hair, or any stray body hairs.

Beard Trimmer & Body Shaver

1. Move the razor head on the skin against the main direction of beard growth and make straight and circuitous movements.
2. Achieve best shaving effect on dry clean face, therefore shave before or a period of time after getting washed.

Cleaning & Maintenance

Clean your personal trimmer regularly. Be sure switch is turned OFF before cleaning.

Cleaning with brush

Use the enclosed brush to clean the unit. Thoroughly brush and blow out hair clippings from the power handle.

Cleaning with water

Your trimmers attachments have rust-resistant, stainless steel cutting blades that permit the cutting attachments to be rinsed under running water if you choose. Do not wash attachments when attached to trimmer. Always keep blade area pointed downward when cleaning. Only after unit has dried completely should the attachment be used.

Charging

The appliance can be directly charged from the adaptor.

Charge the batteries at least 2.5 hours before you use the appliance for a cordless operating time of up to 70 minutes.

Basic parameters

| | |
|------------------|------------------|
| Voltage: | 5W 3.7V 110~240V |
| Charging time: | 2.5h |
| Using time: | 70min |
| lithium battery: | 600mA |

Warning

- Make sure the power is off when replacing the trimmer head.
- Please keep the machine off when charging.
- Do not insert the blade into the ear or nose canal deeply, otherwise it may hurt the ear or nose canal.
- Do not use harsh or corrosive cleaners on the unit or its attachments
- Do not apply pressure or hard objects to attachments.

Environment

Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.

UA



medica+
JAPAN TECHNOLOGY


**Посібник
користувача**

Trimmer 8.0

Зміст

| | |
|-----------------------------------|-------|
| Загальні характеристики | 01-02 |
| Інструкція з експлуатації | 02 |
| Інструкція по заміні головки | 03 |
| Використання тримера | 04 |
| Бритва для тіла/носа/вух ... | 05-06 |
| Тример для брів/бороди/тіла... | 07 |
| Очищення/Очищення щіткою... | 08 |
| Очищення водою | 09 |
| Заряджання..... | 10 |
| Основні параметри | 11 |
| Попередження | 12 |
| Навколишнє середовище..... | 13 |

Загальні характеристики

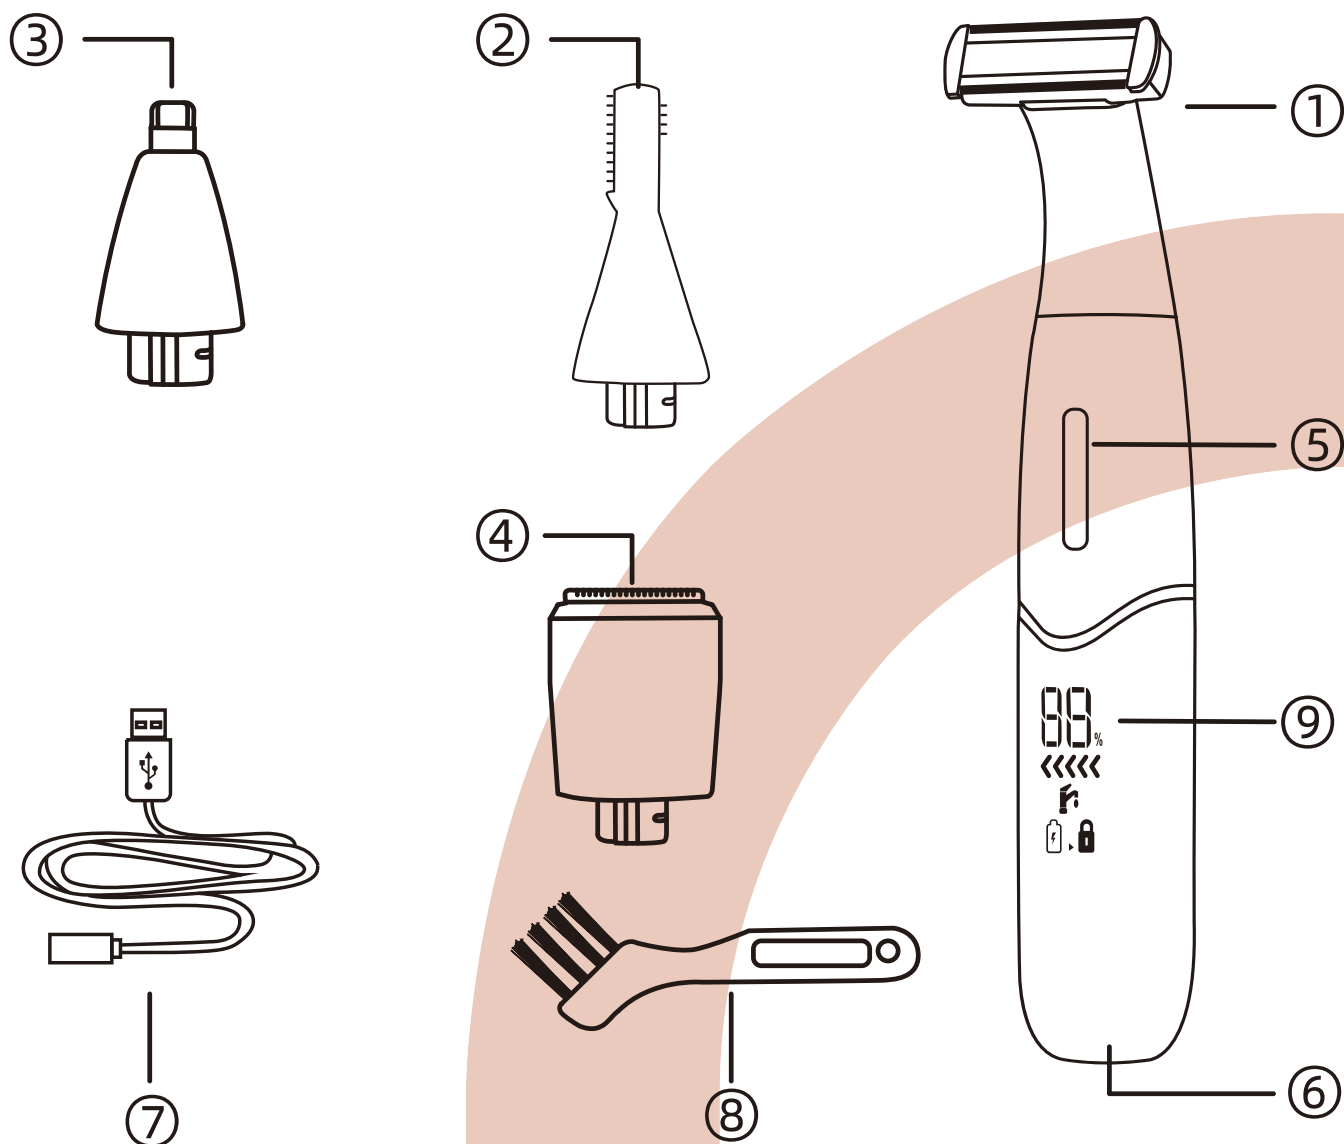

1. Бритва для тіла
2. Триммер для брів
3. Триммер для стрижки волосся в носі
4. Триммер для бороди та бритва для тіла

5. Перемикач
6. USB порт для зарядки
7. USB кабель для зарядки
8. Щітка для чищення
9. Цифровий дисплей

Інструкція з експлуатації тримерного набору

Прочитайте всю інструкцію з експлуатації, перш ніж використовувати набір тримера 4-в-1. Ми прагнемо пропонувати вам добре розроблені продукти, які роблять життя веселим і легким.

Інструкція по заміні головки

Щоб змінити насадки, тримайте корпус тримера стороною перемикача до себе.

Зняття: поверніть його проти стикування, ви почуєте «клацання», після чого зможете відокремити його від виробу.

Встановлення: націльте вісь обертання головки, потім поверніть її за годинниковою стрілкою, затягніть її

Використання тримера

Натисніть нижню частину перемикача, щоб увімкнути пристрій. Виберіть лезо тримера й обережно помістіть його на тіло, де потрібно підстригти волосся. Натисніть верхню частину перемикача, щоб вимкнути живлення після припинення обрізання. Завжди очищайте тример після використання цього приладу. Тримайте цей апарат і USB-кабель у місці, де немає вологи.

Бритва для тіла

1. Рухайте голівкою бритви по шкірі проти основного напрямку росту бороди та робіть прямі та окружні рухи.
2. Досягайте найкращого ефекту гоління на сухому чистому обличчі, тому голіться до або через деякий час після миття.

Тример для носа/вух

1. Тример для носа призначений для видалення небажаного волосся в області носа або вух.
2. Обережно підійдіть до ділянки, який потрібно підстригти. Ніколи не вставляйте тример для носа/вуха в ніс або вушну порожнину, оскільки це може призвести до травми.

3. Якщо ви відчуваєте будь-який біль або дискомфорт під час використання цього продукту, негайно ПРИПИНІТЬ його використовувати
4. Завжди очищайте тример після використання та зберігайте пристрій та шнур USB у вільному від вологи місці.

Триммер для брів

Ви можете використовувати цю насадку для підстригання небажаного волосся на бровах, тонкого волосся на обличчі та вухах або будь-якого небажаного волосся на тілі.

Триммер для бороди та бритва для тіла

1. Рухайте голівкою бритви по шкірі проти основного напрямку росту бороди та робіть прямі та окружні рухи.
2. Досягайте найкращого ефекту гоління на сухому чистому обличчі, тому голіться до або через деякий час після миття.

Очищення та обслуговування

Регулярно чистіть свій особистий тример. Перш ніж чистити, переконайтеся, що вимикач у положенні ВИМКНЕНО.

Очищення за допомогою щітки

Використовуйте щітку, що додається, щоб почистити прилад.

Ретельно розчешіть і видуйте обрізане волосся з ручки живлення.

Очищення за допомогою води

Насадки для тримерів мають стійкі до іржі ріжучі леза з нержавіючої сталі, які дають змогу промити ріжучі насадки під проточною водою, якщо ви забажаєте.

Не мийте насадки, коли вони прикріплені до тримера. Під час чищення завжди тримайте лезо спрямованим униз.

Насадку можна використовувати лише після повного висихання.

Заряджання

Пристрій можна заряджати безпосередньо від адаптера.

Заряджайте батареї принаймні за 2,5 години перед використанням приладу для роботи без підзарядки до 70 хвилин.

Основні параметри

Напруга: 5 Вт 3,7 В 110~240 В

Час зарядки: 2,5 год

Час використання: 70 хв

Літієвий акумулятор: 600 мА

Попередження

- Під час заміни головки тримера переконайтеся, що живлення вимкнено.
- Будь ласка, тримайте пристрій вимкненим під час заряджання.
- Не вставляйте лезо у слуховий або носовий прохід глибоко, інакше можна пошкодити вушний або нісовий прохід.
- Не використовуйте агресивні чи корозійні засоби для чищення пристрою чи його насадок.
- Не тисніть на насадки та не прикладайте до них твердих предметів.

Навколишнє середовище

Не викидайте прилад разом зі звичайними побутовими відходами після закінчення терміну служби, а здайте його в офіційний пункт збору для переробки. Роблячи це, ви допомагаєте зберегти навколишнє середовище.



medica+

JAPAN TECHNOLOGY